

### USE OF PRODUCT

The LuxAir hatch is a glazing hatch that meets the requirements of European Standard ISO 12216. It is designed for installation in zones IIa, III and IV of pleasure craft. It is approved for category A boats up to 24 meters.


New: The external handle can be unclipped by pulling on the lever. To replace it, engage the nose of the handle and press the lever as shown in the diagram.



### RECOMMENDATIONS FOR USE

The hatch must be closed when sailing.

- Locking the hatch: The hatch is locked by pushing the inside handle.
- Safety: Do not hang anything from the handles.
- At maximum opening, the hatch may come into contact with the deck recess, do not force.
- Carry out regular maintenance as recommended in the maintenance section.

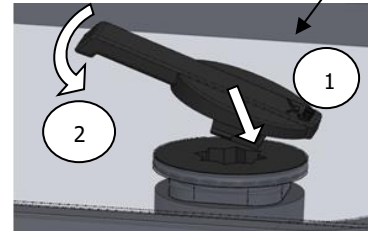

### FRICITION SETTINGS

If holding the lid in the intermediate position isn't sufficient, adjust the hinge friction. Adjust the tightening of the nuts shown in the photo on the right (red arrows). Using a 7 mm spanner, tighten the nuts progressively by a ¼ of a hole on each nut, test the opening and repeat the operation if necessary. Repeat the operation for the other joints until the desired hold is achieved.





### MAINTENANCE

Maintaining a hatch is essential to ensure its functionality and increase its lifespan. It is therefore essential to follow GOIOT Systems' recommendations:

- Rinse the hatches with fresh water after every navigation and at least every 6 months.
- Clean the inside of the hatch with a non-aggressive product (neutral pH soap) and water using a soft cloth, preferably microfibre.
- Never use aggressive products on the glass or the perimeter seal for cleaning, as this could damage it. An indicative list of banned chemicals can be found on our website in the technical support section.
- Never use a high-pressure cleaner on a hatches.
- If the hatch is damaged, it is advisable to replace it; contact your dealer.

Periodic checks (at least once a year; during refit):

- Check the condition of the black EPDM seal on the hatch, check for foreign bodies.
- Check the condition and operation of the handles and, if necessary, grease the seal under the outer handle with silicone grease. To do this, dismantle the inside handle by removing the pin shown below to gain access to the screw.

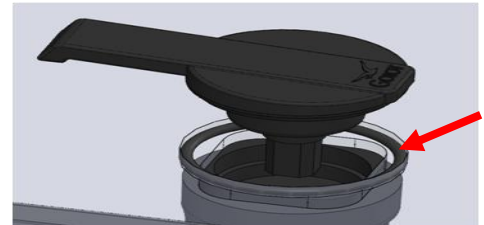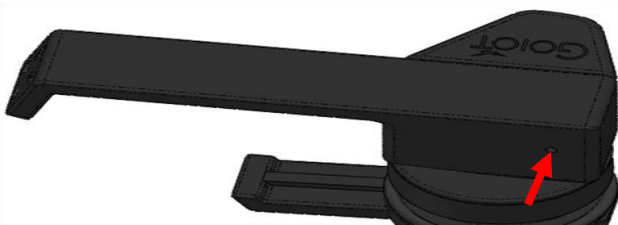

If a component fails, replace it. Our website contains installation instructions, product and kit references, a list of distributors and technical manuals.